



CASTROL[®] ePODS[™]

eFFICIENT PREMIUM OIL DISPENSING SYSTEM



ASSEMBLY INSTRUCTIONS & HOW TO USE GUIDE

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.[®]





BOX CONTENTS



CASTROL® ePODS™ SHIPS IN 3 BOXES

- BOX 1: (1) Base, Pole, Instructions, Labels & Hardware
- BOX 2: (1) Dispenser
- BOX 3: (4) Pitchers

Stacked Box Dimensions: 52" wide x 49" high x 31" deep

Assembled Specs:

- BASE: 26" wide x 69" high
- DISPENSER: 23.48" x 23.48"
- APPROXIMATE WEIGHT: 50 lbs. (excludes oil)



BOX #1

- 1- Instructions
- 1- Grey Base Pan
- 1- Black Drip Pan
- 1- Metal Pole
- 1- Bag of Labels
- 1- Hang Tag
- 1- Hardware Bag:
 - 1- Allen Wrench
 - 1- Center Bolt with Lock Washer
- 5- Metal Glides



BOX #2

- 1- Dispenser
- 1- Grey Ring
- 1- Black Bearing



BOX #3

4-Pitchers

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.®





BASE ASSEMBLY



STEP 1



STEP 2

STEP 1

Empty Box #1 contents where Castrol® ePODS™ will be set up.

STEP 2

Turn the metal base on its side and insert each of the five metal leveling glides.



STEP 3



STEP 4

STEP 3

Ensure base is level before proceeding.

STEP 4

Place the black drip pan on top of the metal base.



STEP 5



STEP 6

STEP 5

Insert the threaded end of the metal pole into base.

STEP 6

Turn the base on its side with pole and drip pan held in place. Put the lock washer on the bolt. Insert the bolt into the center hole in the bottom of the base, and fully tighten using the provided allen wrench.

TWO-PERSON SET UP REQUIRED

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.®



DISPENSER INSTALLATION



STEP 1

Locate grey dispenser ring and slide it all the way down the pole.

STEP 2

Locate the black bearing and slide it down the pole, until it rests on the grey dispenser ring.



STEP 3

With one person on each side, lower the dispenser onto the pole until it rests securely on the black bearing. The dispenser should be able to move freely.



STEP 4

Apply four dispenser labels on the dispenser to match the label on the oil bottles that you intend to install on the dispenser.

TWO-PERSON SET UP REQUIRED



PITCHER INSTALLATION



STEP 1



STEP 2

STEP 1

Locate the four pitchers in Box #3 and the pitcher labels from Box #1

STEP 2

Select the four pitcher labels to match the four labels on the dispenser.



STEP 3



STEP 4

STEP 3

Apply four pitcher labels on the pitchers to match the label on the oil bottles that you intend to install on the dispenser.

STEP 4

To insert pitcher, ensure the handle is facing you and slide in to the grooves beneath the red button until you hear a click. **WARNING: IF YOU DO NOT HEAR THE CLICK, THEN THE PITCHER IS NOT PROPERLY IN PLACE.**



STEP 5

STEP 5

Make sure the red lever is in the **vertical (OFF POSITION)** as shown. Failure to do so will cause the pitcher to leak oil.

TWO-PERSON SET UP REQUIRED

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.®



OIL BOTTLE INSTALLATION



STEP 1

Remove the Castrol® ePODS™ oil bottle from box, and remove the red cap, **DO NOT DISCARD RED CAP. DO NOT REMOVE THE BOTTLE SEAL.**



STEP 2

Match the bottle (brand and viscosity) to the correct dispenser and pitcher.



STEP 3

Holding the bottle with two hands, and the front label facing out, turn the bottle over with seal facing down, and carefully lower the bottle onto the dispenser. Repeat steps 1 through 3 above for remaining bottles.



WARNING:

When the oil bottle is empty, there may be up to three quarts of oil remaining in the dispenser reservoir. You **MUST** drain the remaining three quarts of oil before installing a new oil bottle. Failing to do so may result in the dispenser reservoir overflowing. Ensure the dispenser reservoir is empty by pushing in the red button and dispensing all remaining oil into the pitcher.

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.®





ADDITIONAL IMPORTANT INFORMATION



Place the provided hangtag on a bulletin board for easy reference.



DO NOT stack bottles upside down.
Note: The handle location indicates the top of the box.

MOVING OR RELOCATING CASTROL® ePODS™



Once the dispenser is loaded with oil bottles, it should not be moved. If you intend on moving Castrol ePODS to a new location, you **MUST** empty and remove all bottles, drain all four dispenser reservoirs, empty and remove all pitchers before moving. It is recommended that you use a hand truck to safely relocate Castrol ePODS.

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.®






HOW TO USE

Now that you have set up your system, it is time to learn how to use Castrol® ePODS™ for an oil change.



A Castrol ePODS bottle holds 5 gallons of oil. You can see through the oil bottle so you will always know the inventory level.

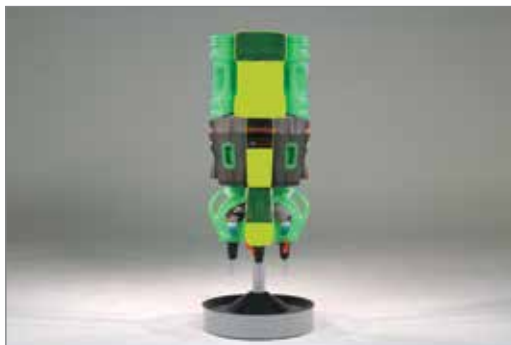

The oil from the bottle flows into the dispenser and then into the pitcher.



STEP 1



STEP 2

STEP 1

Before you dispense oil, make sure the red lever is in the "OFF", or vertical position. This is to ensure that oil remains in the pitcher.

STEP 2

To fill the pitcher with oil, firmly press and hold the red button on the dispenser to start the flow of oil. The red button may be hard to push at first. After a few uses the button will become easier to push.

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.®





STEP 3

STEP 3

Fill the pitcher with the required amount of oil. The pitchers have markings to help you dispense the correct number of quarts. Firmly press and hold the red button until the oil fills to the required line on the pitcher. Once you have reached that line, release your finger from the red button and the oil flow will stop.



STEP 4

STEP 4

To remove the pitcher from the dispenser, grab the handle, slightly pull down, and pull it out of the slot.



STEP 5



STEP 5

Be careful while walking around with the pitcher as the top is open and oil can spill out if not handled with care.

NOTE: Oil is dispensed from the bottom of the pitcher.



HOW TO USE (continued)



STEP 6



STEP 7

STEP 6

Insert the pitcher's tube into the engine.

STEP 7

Move the lever to the ON or horizontal position to install the oil.



STEP 8



STEP 9

STEP 8

Once you have installed the oil, turn the lever back to the OFF position.

STEP 9

Use a shop rag to clean the bottom of the tube to prevent oil drips.



STEP 10

STEP 10

Place the pitcher back into the dispenser. Remember you will hear an audible click which ensures that the pitcher is aligned with the hole on the dispenser and is ready for the next oil change. Make sure the red lever is in the "OFF", or vertical position.

IT'S MORE THAN JUST OIL. IT'S LIQUID ENGINEERING.®





IMPORTANT

- Do not move the dispenser after loading the bottles.
- The red buttons should not be pressed until the dispenser has been loaded with oil.
- Press red dispenser button firmly to fully open dispensing channel and dispense oil.
- Pitcher can be overfilled if red button is held in too long.
- Make sure lever is vertical [off position] after using a pitcher.
- Ensure that each pitcher “clicks” fully into place into the dispenser.
- The dispenser should be rotated **SLOWLY** to avoid oil spilling from the dispenser reservoir.
- Up to three quarts of oil will remain in dispenser reservoir when bottle is empty.
- Replace bottle only when bottle **AND** dispenser reservoir are completely empty.
- Place bottle on dispenser with front label facing out.
- Replace red cap back onto empty bottle before discarding or recycling.

**For support or questions regarding Castrol® ePODS™ ,
please contact your Castrol representative or call 1-888-CASTROL**

eFFICIENT PREMIUM OIL DISPENSING SYSTEM

Castrol® ePODS™, our newest innovation, brings a premium presence to workshops, enables flexible viscosity assortment and offers multiple business benefits.

MAXIMUM OIL USAGE



EFFICIENT INVENTORY MANAGEMENT



PREMIUM LOOK FOR A PROFESSIONAL SHOP